

SCANcube IV

Standard-Steckerpositionen und -Pinbelegungen



SCANcube IV 10

 


SCANcube IV 14

SL2-100-Interface

SL2-100 / POWER IN
(25-polige Sub-D-Buchse)

| | |
|---------------------|---------------------|
| DO NOT CONNECT (1) | (14) DO NOT CONNECT |
| DO NOT CONNECT (2) | (15) DO NOT CONNECT |
| DATA IN - (3) | (16) DATA IN+ |
| DO NOT CONNECT (4) | (17) DO NOT CONNECT |
| DO NOT CONNECT (5) | (18) DO NOT CONNECT |
| DATA OUT - (6) | (19) DATA OUT+ |
| DO NOT CONNECT (7) | (20) DO NOT CONNECT |
| DO NOT CONNECT (8) | (21) DO NOT CONNECT |
| +30 V (9) | (22) +30 V |
| +30 V (10) | (23) GND |
| GND (11) | (24) GND |
| DO NOT CONNECT (12) | (25) DO NOT CONNECT |
| DO NOT CONNECT (13) | |



XY2-100-Interface

DIGITAL POWER IN
(25-polige Sub-D-Buchse)

| | |
|---------------------|---------------------|
| CLOCK - (1) | (14) CLOCK+ |
| SYNC - (2) | (15) SYNC+ |
| CHAN1 - (3) | (16) CHAN1+ |
| CHAN2 - (4) | (17) CHAN2+ |
| DO NOT CONNECT (5) | (18) DO NOT CONNECT |
| STATUS2 - (6) | (19) STATUS2+ |
| DO NOT CONNECT (7) | (20) DO NOT CONNECT |
| STATUS1 - (8) | (21) STATUS1+ |
| +30 V (9) | (22) +30 V |
| +30 V (10) | (23) GND |
| GND (11) | (24) GND |
| DO NOT CONNECT (12) | (25) DO NOT CONNECT |
| DO NOT CONNECT (13) | |

