



Important note for upgrading users

Upgrade from Version 1.0.5.x or lower to version 1.0.6.1

The remote function mechanism 'job loading' and 'switch automatic mode on' has changed. Now one gets an immediate reply and the action is executed asynchronously. State queries during these actions are possible. Please refer to the remote control manual for details.

Change for 3D execution: 3D execution of simple graphics doesn't execute a jump back to the focus level anymore. Only for 3D helices in a 2D execution a jump back is inserted.

Upgrade from Version 1.0.7.x or lower to version 1.0.8.0

The laser definition file 'GeneralCO2.sll' is removed. Instead 2 laser definition files [GeneralCO2 (active high).sll and GeneralCO2 (active low).sll] for active high or low levels are supplied.

Upgrade from Version 1.0.x.x to Version 1.2.x.x

If you have already a dongle it will not activate the new laserDESK[®] version anymore. If you like to use the new release you need to upgrade your dongle. In that case please contact your sales representative of SCANLAB.

To reduce memory consumption the 3D viewer can now be switched. Per default the 3D viewer is switched off. It can be activated in the *Options* on page *View*.

Update from Version 1.2.0.1 to Version 1.2.0.2

The parameter **distance** in the parameter wizard – page *symbol selection* – has been changed to **spacing**. This value now defines the empty space between objects and no more the center to center distance.

Update to Version 1.2.0.4 (or higher)

The directory path of the laser definition files has changed from the program directory (normally 'C:\Programs\Scanlab\LaserDesk\LaserDefinitions\') to the application data directory 'C:\ProgramData\Scanlab\SL LaserDesk\LaserDefinitions\'. All existing files will automatically be copied into the new directory. You don't need to do any action. This move allows to exclude changed definition files from the installation package and to prevent the overwriting during a new installation.

Following default values of Shortcuts have been changed to adapt them on general standards:



Redefinition:

Open options now CTRL + K, formerly CTRL + O

Ungroup now CTRL + ALT + G formerly CTRL + U

New:

File open is CTRL + O

Upgrade from Version 1.2.x.x to Version 1.4.x.x

If you have already a dongle for releases up to versions 1.2.x.x it will not activate the new laserDESK® version 1.4.x anymore. If you like to use the new release you need to upgrade your dongle. In that case please contact your sales representative of SCANLAB.

The new laserDESK version allows you to work with the RTC5 or the RTC6. If you have both cards installed in your PC you can select which one you want to use.

Upgrade from Version 1.4.0.x to Version 1.4.1.x (important only for RTC6)

Integration of the RTC6 firmware version 1.3.1. This version needs an RTC6 BIOS 2.1 or higher. Older RTC6 firmware and BIOS versions are not supported anymore. In case a BIOS update is necessary. Attached in this package is a BIOS upgrade tool. Please read the *readme.txt* file before using the BIOS upgrader.

Version 1.4.0.x used RTC6 firmware 1.2.x and can't be used for the new RTC6 BIOS anymore. If the RTC6 has a BIOS 2.1 or higher you need to use laserDESK versions 1.4.1.x or higher.

Update to Version 1.4.3.x

If the UFPM mode for bitmaps is used, additional parameters of the grey value calibration table are needed. These jobs can't be loaded by older versions anymore. If you reset the Bitmap Mode to 'Standard', the job will be compatible to older versions and can be reloaded again.

A firmware change of the RTC6 up to version 1.4 (RTC6DLL 6.9.0.0) during runtime may cause serious problems (including PC freezing or blue screen). Therefore it is strongly recommended to cycle the PC power before a firmware change of the RTC6. This is particularly the case when running different laserDESK versions.